


RELAY LOCATION


NOTICE
There is a case that the following figures are different from that for your vehicle in the devices locations due to the model or specification.

INSTRUMENT PANEL


RIGHT-HAND DRIVE MODEL

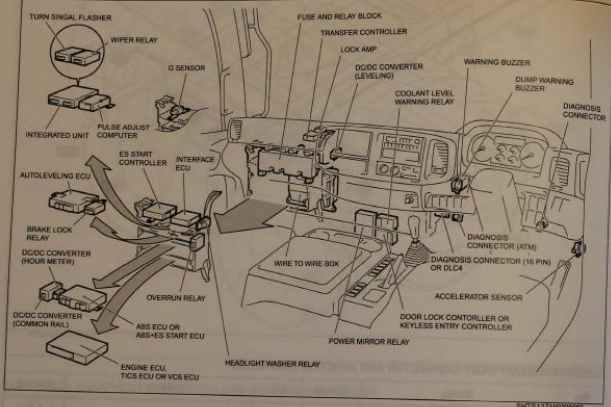

LEFT-HAND DRIVE MODEL

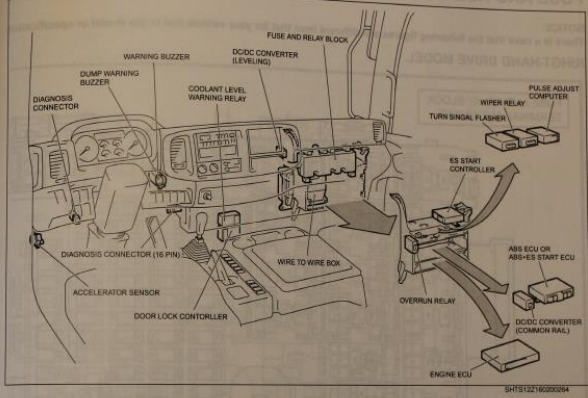



CHASSIS

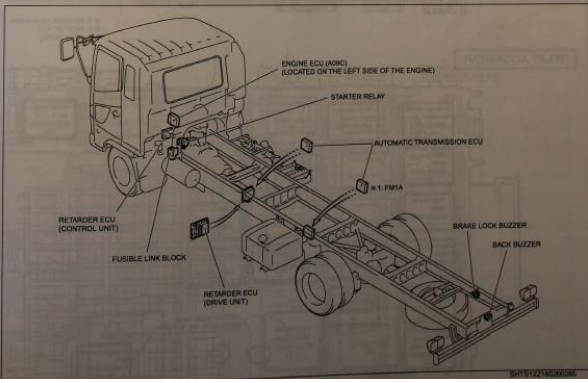



FUSE AND RELAY BLOCK

NOTICE
There is a case that the following figures are different from that for your vehicle due to the model or specification.



RIGHT-HAND DRIVE MODEL

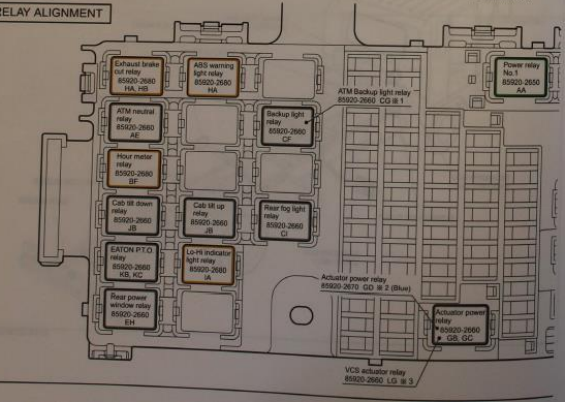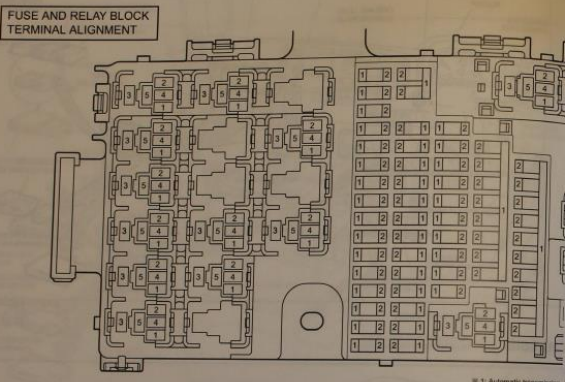

ELECTRIC WIRE

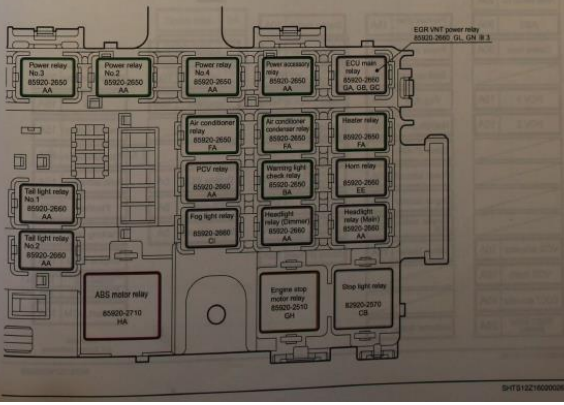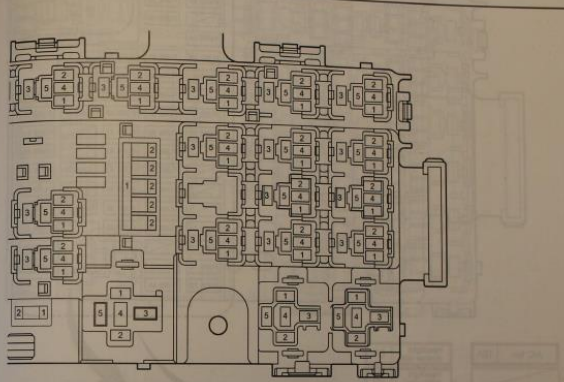

FUSE ALIGNMENT

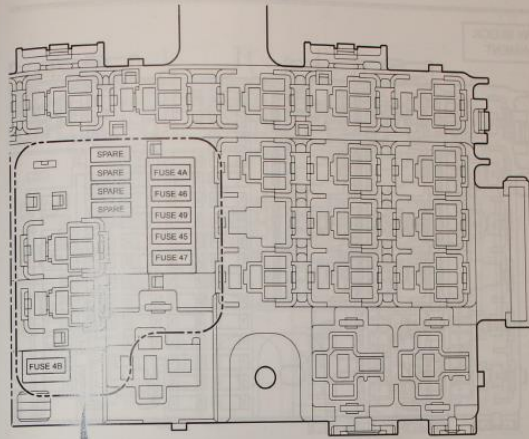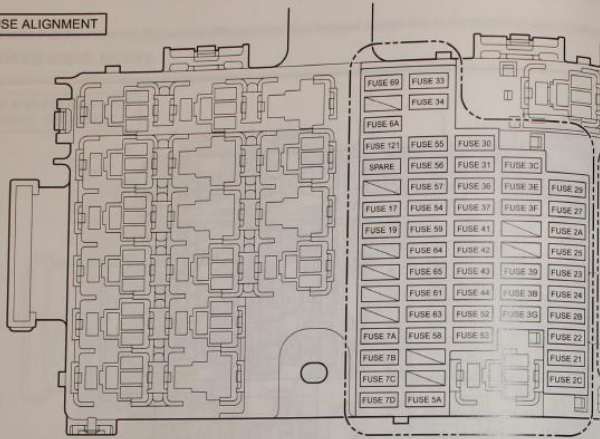

A/C fan	10A
Power window RR	20A
ABS	30A
Spare fuse	30A
PCV 1	10A
PCV 2	10A
VCS actuator	10A
VCS main	10A
EDC7 actuator	10A
EDC7 ECU (MAIN)	20A

Headlight dimmer relay	5A
Headlight main relay	5A
Pre-heat timer, Brake lock	15A
Power mirror	10A
Back-up light	10A
Fog light	10A
Headlight cleaner	10A
Spare (P-I)GN	10A
Power take off	10A
Engine actuator	10A
Transfer control, ATM	10A
Mirror heater	15A
Retarder brake	5A

Starter switch	10A
Starter relay	10A
Radio, Cigarette lighter	10A
Spare (P-ACC)	10A
Headlight main RH	10A
Headlight main LH	10A
Headlight Dimmer RH	10A
Headlight Dimmer LH	10A
Tail light, Cornering light	10A
Spare (P-Tail)	10A

Meter	10A
ABS	10A
Generator	10A
Engine ECU	5A
ES start	5A
Engine stop relay	5A

Power window	20A
ABS	15A
Spare (P-Battery)	15A
Room light, DST-1	15A
Radio, Tachograph	10A
Flasher	10A
Parking light	10A
Engine ECU	10A
Engine stop	10A #1
Engine actuator	15A #2
ES start, ATM	10A

Spare fuse	5A
Spare fuse	10A
Spare fuse	15A
Spare fuse	20A

Heater	15A
Wiper	10A
Stop light	10A
Horn	5A
Exhaust brake	5A

Air conditioner	15A
-----------------	-----

#1: Indonesia
#2: Except Indonesia